




PROGRAMMATION GUIDE FOR THE RX-Multi RECEIVER

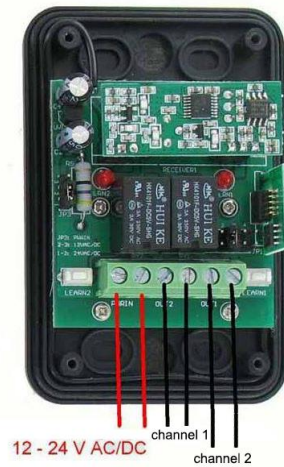

This new receiver has an important advantage compared to the previous models, since it allows us to have up to 4 receivers in the same device, just by changing the jumpers' position.

In that way, we will have:

- 1- Universal Rolling code receiver 433Mhz
- 2- Universal Fixed code receiver 433Mhz
- 3- Receiver for CAME 433Mhz
- 4- Receiver for NiceFlor 433Mhz

To programme it, you should follow these steps:

1. Open the receiver.

Press once the button "LEARN1" to programme channel 1 (OUT1) and the button "LEARN2" to programme channel 2 (OUT2). The LED corresponding to each channel will stay fixed. LRN1 or LRN2 depending on the chosen channel.

2. Programme the remote.

Now press once in the remote the button you want to programme, the receiver's LED will go off. Press again and hold down the same button in the remote, the LED will flash several times to indicate it has received the signal.

The remote has been stored in the receiver.

3. Reset the receiver's memory.

When installing the receiver, it is advisable to fully reset the memory in the receiver before programming any remote. For that, press and hold down for around 15 seconds the button labelled "LEARN1" until the LED goes off.